


NOTE: REMOVE J1 & J2 AND APPLY +5VDC AND COMMON TO POWER UNIT FOR TTL/CMDS TO ISOLATED RS485/RS422 CONVERSION.

JUMPER INSTALLED (FACTORY SETTING)

J7	J8	J7	J8	J9	J10	J11	J12	J13	J14	MODE/NOTES
R	R	I	I	I	I	I	I	A	I	RS422(4-WIRE) *
I	I	R	R	R	R	I	I	B	R	RS485(2-WIRE)
I	I	R	R	R	R	I	I	A	R	RS485(LOOP-BACK)
R	R	I	I	I	I	I	I	A	R	RS422(MULTIDROP)
A=INSTALL A, B=INSTALL B, I=INSTALL, R=REMOVE										
*=FACTORY DEFAULT SETTING										

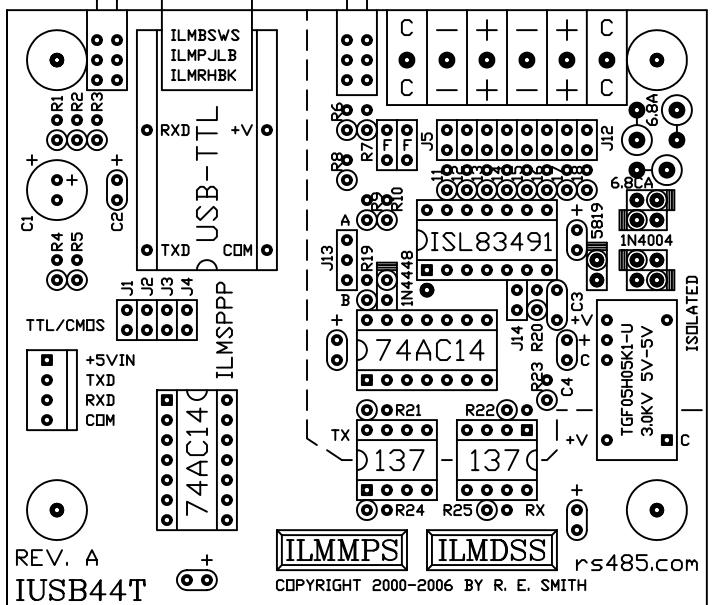

RESmith
 WWW.RS485.COM
 4311 R. E. Smith Drive, West Chester, Ohio 45069
 513-874-4796

MODEL REV. A
 IUSB44T

This drawing is the property of R. E. SMITH and shall not be used except with the written permission of R. E. SMITH, no copies shall be made of it and all proprietary rights in the matter contained in this drawing are the property of R. E. SMITH. COPYRIGHT - R. E. SMITH, 2000-2004		DRAWN BY RES	SUBJECT "AUTO" RS485/RS422	
SHEET 1 OF 1		DATE 7-27-06	FOR ISOLATED 2/4-WIRE	
ISUB44T		SCALE NONE	RES R. E. SMITH DVG. NDL 4311 R. E. SMITH DRIVE HAMILTON, OHIO 45011	
CHKD. BY RES		IUSB44T		REV. A